

F2 T P0

POLE-OPERATED FRESNEL SPOTLIGHT
WITH TUNGSTEN LED
DMX CONTROL TABLE



1CH Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%

2CH 1 Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%
2	Dimmer fine	000	-	255	0% to 100%

2CH 2 Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%
2	Multifunctional Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)
		128	-	250	Strobe slow -> fast (1Hz - 20Hz)
		251	-	255	Strobe open

3CH Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%
2	Multifunctional Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)
		128	-	250	Strobe slow -> fast (1Hz - 20Hz)
		251	-	255	Strobe open
3	Device settings	000	-	005	no function
		006	-	127	Dimmer Response LED (hold 5s)
		128	-	191	Dimmer Response Halogen (hold 5s)
		192	-	255	no function

F2 T PO

POLE-OPERATED FRESNEL SPOTLIGHT
WITH TUNGSTEN LED
DMX CONTROL TABLE



4CH Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%
2	Multifunctional Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)
		128	-	250	Strobe slow -> fast (1Hz - 20Hz)
		251	-	255	Strobe open
3	Set dimmer curve	000	-	005	no function
		006	-	063	Linear Dimmer Curve
		064	-	127	Exponential Dimmer Curve
		128	-	191	Logarithmic Dimmer Curve
		192	-	255	S-Curve Dimmer Curve
4	Device settings (please read remark *1)	000	-	005	no function
		006	-	127	Dimmer Response LED (hold 5s)
		128	-	191	Dimmer Response Halogen (hold 5s)
		192	-	200	Fan Auto (hold 5s)
		201	-	209	Fan Max (hold 5s)
		210	-	218	Fan Silent (hold 5s)
		219	-	223	LED PWM Frequency 800Hz (hold 5s)
		224	-	228	LED PWM Frequency 1200Hz (hold 5s)
		229	-	233	LED PWM Frequency 2000Hz (hold 5s)
		234	-	238	LED PWM Frequency 3600Hz (hold 5s)
		239	-	243	LED PWM Frequency 12kHz (hold 5s)
		244	-	248	LED PWM Frequency 25kHz (hold 5s)
		249	-	255	no function

5CH Mode					
CH	Function	Values			
1	Dimmer	000	-	255	0% to 100%
2	Dimmer fine	000	-	255	0% to 100%

F2 T P0

POLE-OPERATED FRESNEL SPOTLIGHT WITH TUNGSTEN LED DMX CONTROL TABLE



3	Multifunctional Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)
		128	-	250	Strobe slow -> fast (1Hz - 20Hz)
		251	-	255	Strobe open
4	Set dimmer curve	000	-	005	no function
		006	-	063	Linear Dimmer Curve
		064	-	127	Exponential Dimmer Curve
		128	-	191	Logarithmic Dimmer Curve
		192	-	255	S-Curve Dimmer Curve
5	Device settings (please read remark *1)	000	-	005	no function
		006	-	127	Dimmer Response LED (hold 5s)
		128	-	191	Dimmer Response Halogen (hold 5s)
		192	-	200	Fan Auto (hold 5s)
		201	-	209	Fan Max (hold 5s)
		210	-	218	Fan Silent (hold 5s)
		219	-	223	LED PWM Frequency 800Hz (hold 5s)
		224	-	228	LED PWM Frequency 1200Hz (hold 5s)
		229	-	233	LED PWM Frequency 2000Hz (hold 5s)
		234	-	238	LED PWM Frequency 3600Hz (hold 5s)
		239	-	243	LED PWM Frequency 12kHz (hold 5s)
		244	-	248	LED PWM Frequency 25kHz (hold 5s)
		249	-	255	no function

EN: (1*) After the adjustments have been made, set the value to 000 to avoid disturbance by endless function call.

DE: (1*) Nachdem die Einstellungen vorgenommen wurden, stellen Sie den Wert auf 000 ein, um Störungen durch endlosen Funktionsaufruf zu vermeiden.

FR: (1*) Une fois les ajustements effectués, réglez la valeur sur 000 pour éviter les perturbations par appel de fonction sans fin.

ES: (1*) Después de realizar los ajustes, establezca el valor en 000 para evitar perturbaciones mediante una llamada de función sin fin.

PL: (1*) Po dokonaniu ustawień ustaw wartość na 000, aby uniknąć zakłóceń przez niekończące się wywołanie funkcji.

IT: (1*) Dopo aver effettuato le regolazioni, impostare il valore su 000 per evitare disturbi causati da una chiamata a funzione infinita.